







# MAINTENANCE

Follow the hourly or calendar intervals, whichever occurs first. Service more often under dusty, heavy load operating conditions. **Please refer to your engine's owners manual for specific engine maintenance.**

	Every 5 hours or daily	25 hours or every season	50 hours or every season	100 hours or every season
	Check oil level			
	✓			
	Change oil, also replace oil filter if equipped			
	*Change oil after first 5 hours, then after every 50 hours or every season			
	*		✓	
	Replace foam air cleaner or optional foam pre-cleaner			
		✓		
	Replace paper air cleaner			
		✓		
	Replace spark plug			
				✓
	Replace in-line fuel filter if equipped			
				✓