

SERVICING YOUR ENGINE

MAINTENANCE SCHEDULE

REGULAR SERVICE PERIOD (3)		Each use	First month or 20 Hrs.	Every 3 months or 50 Hrs.	Every 6 months or 100 Hrs.	Every year or 300 Hrs.
• Engine oil	Check level	<input type="radio"/>				
	Change		<input type="radio"/>		<input type="radio"/>	
• Reduction gear oil (applicable types)	Check level	<input type="radio"/>				
	Change		<input type="radio"/>		<input type="radio"/>	
• Air filter	Check	<input type="radio"/>				
	Clean			<input type="radio"/> (1)	<input type="radio"/> * (1)	
	Replace					<input type="radio"/> **
• Sediment cup	Clean				<input type="radio"/>	
• Spark plug	Check-adjust				<input type="radio"/>	
	Replace					<input type="radio"/>
• Spark arrester (optional parts)	Clean				<input type="radio"/>	
• Idle speed	Check-adjust					<input type="radio"/> (2)
• Valve clearance	Check-adjust					<input type="radio"/> (2)
• Combustion chamber	Clean	After every 500 Hrs. (2)				
• Fuel tank & filter	Clean				<input type="radio"/> (2)	
• Fuel tube	Check	Every 2 years (Replace if necessary) (2)				

• Emission-related items.

* Internal vent carburetor (See page 7) with dual element type only. (Cyclone type every 6 months or 150 hours.)

** Replace paper element type only. Cyclone type every 2 years or 600 hours.

(1) Service more frequently when used in dusty areas.

(2) These items should be serviced by your servicing dealer, unless you have the proper tools and are mechanically proficient. Refer to Honda shop manual for service procedures.

(3) For commercial use, log hours of operation to determine proper maintenance intervals.